YASHICA

FX-2

ASSEMBLING CHART

YASHICA CO., LTD.
TOKYO JAPAN

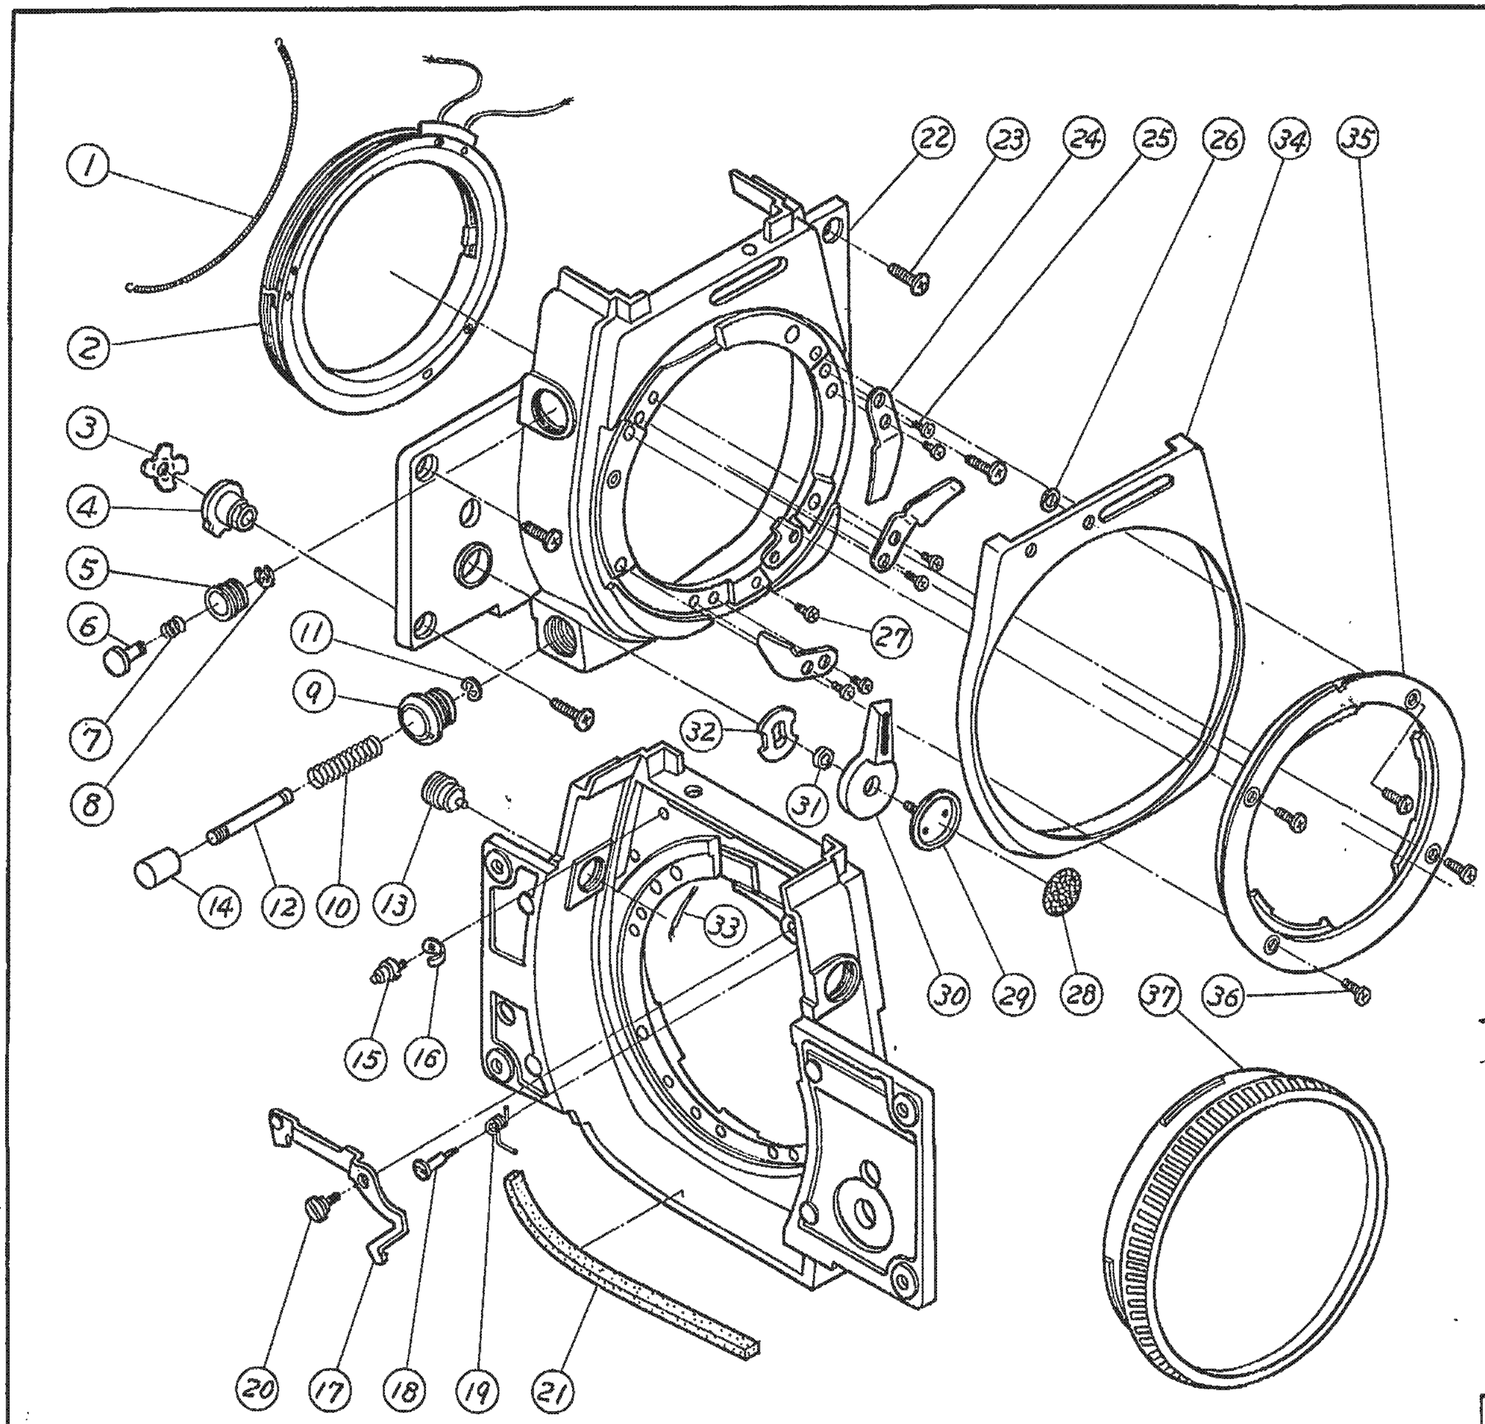

	PARTS NO	DESCRIPTION	QTY
1	133161	Aperture Resistor Ring Spring	1
2	133021	Aperture Resistor Ass'y	1
3	170634	Plate Spring	1
4	121037	Self-timer Driving Plate Ass'y	1
5	128153	Lens Lock Button Holder	1
6	128154	Lens Lock Button	1
7	128155	Lens Lock Button Spring	1
8	66101225	Snap Ring (E-12)	1
9	128146	Diaphragm Button Holder	1
10	131809	Diaphragm Button Spring	1
11	66101524	Snap Ring (E-15)	1
12	128145	Diaphragm Button Shaft	1
13	650083	Synchro Terminal Ass'y	1
14	128147	Diaphragm Button	1
15	133162	Aperture Ring Spring Post (A)	1
16	110928	Lead Wire Holder	1
17	128088	Lock Lever Ass'y	1
18	128198	Lock Lever Spring Shaft	1
19	128160	Lock Lever Spring	1
20	128159	Lock Lever Shaft	1
21	170070	Light-proof Moquette	1
22	★	Mount Base Sub Ass'y	1
23	128128	Mount Base S.S.	4
24	128149	Mount Spring	3
25	61911824	Mount Spring S.S.	6
26	60132610	Adjusting Washer	
27	61912524	Setting Screw	3
28	128182	Self Lever Leather	1
29	128181	Self-timer Lever S.S.	1
30	128180	Self-timer Lever	1
31	121142	Self Lever Collar	1
32	121141	Self Lever Base	1
33	133525	Synchro Lead Wire (C)	1
34	128144	Mount Cover	1
35	128150	Lens Mount	1
36	61923521	Setting Screw	4
37	128118	Body Cap	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Mount Base Ass'y	133068	1~36.

NOTE: (parts with marked "★" are not available.)

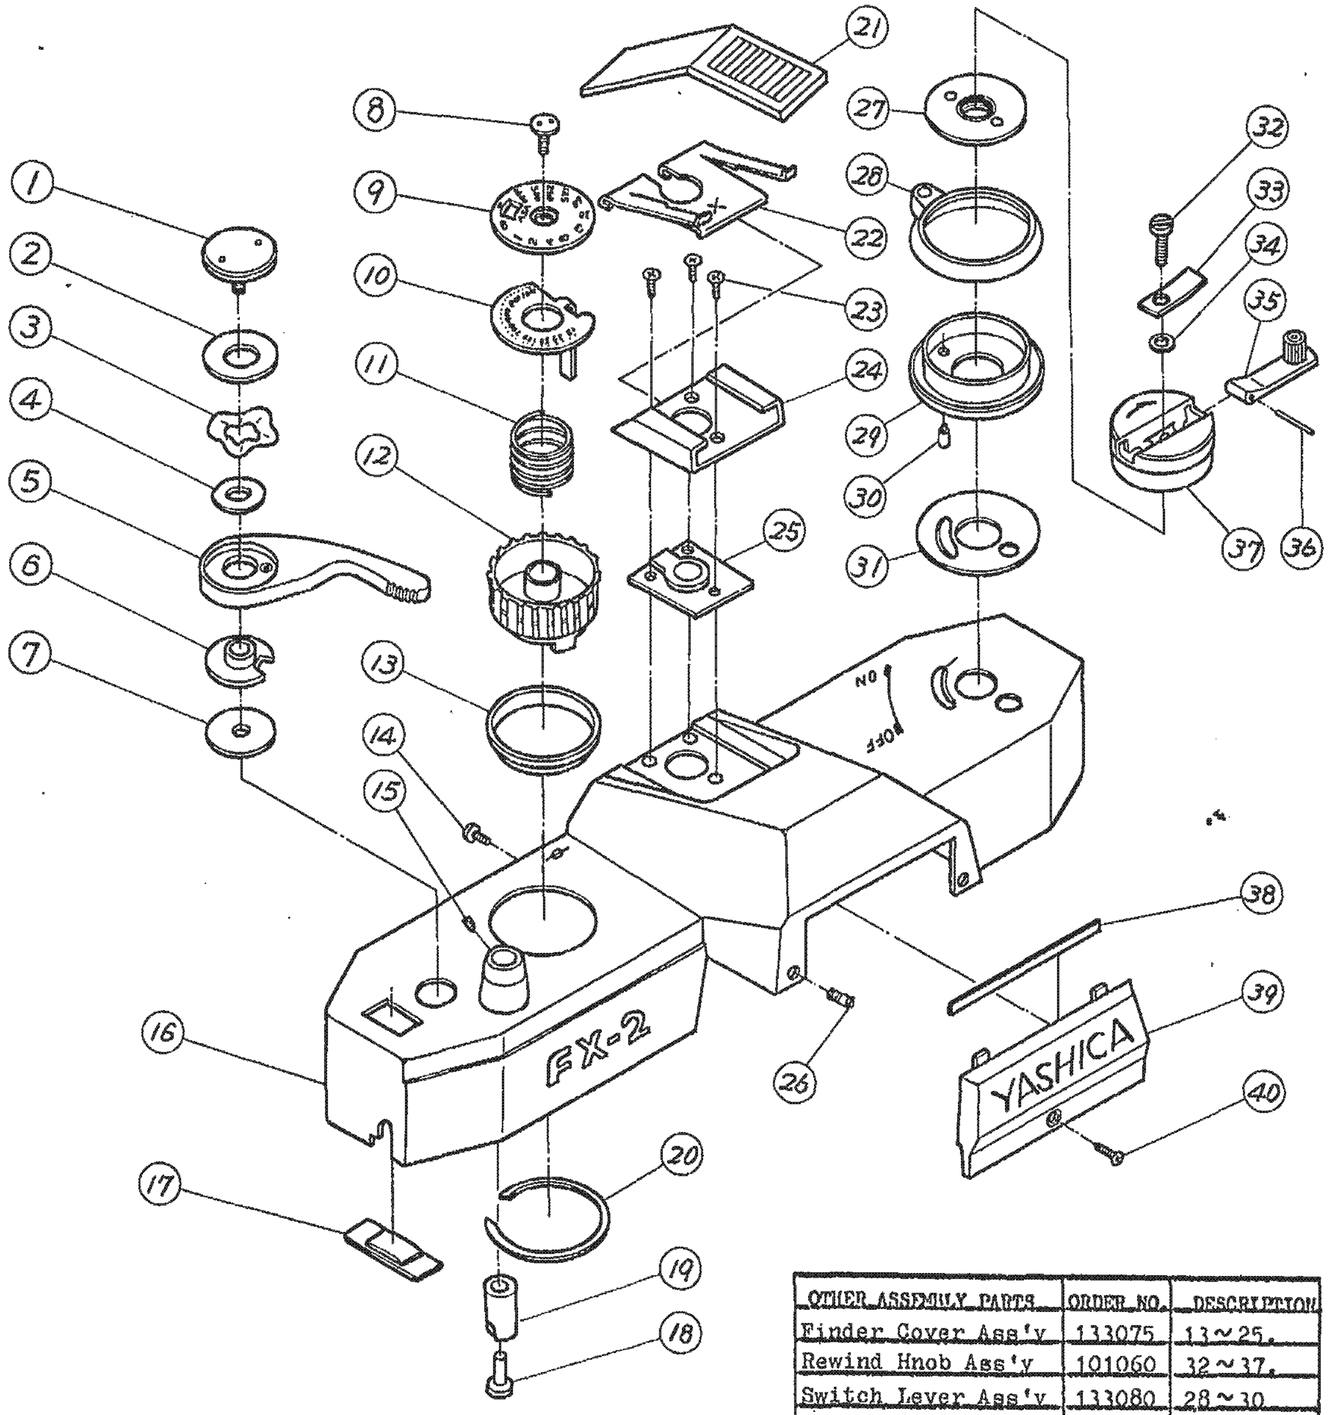

	PARTS NO	DESCRIPTION	QTY
1	~~128658~~	Winding Lever S.S.	1
2	~~170230~~	Winding Lever Friction SP Washer	1
3	~~121659~~	Winding Lever Friction Spring	1
4	60327124	Adjusting Washer	
5	~~121077~~	Winding Lever Ass'y 128077	1
6	~~170225~~	Winding Lever Base 133686	1
7	121640	Winding Lever Spacer (I)	1
	121641	Winding Lever Spacer (II)	
	121642	Winding Lever Spacer (III)	
8	133298	Name Plate S.S.	1
9	133297	Shutter Dial Plate	1
10	133295	ASA Name Plate	1
11	133294	ASA Changing Spring	1
12	133296	Shutter Dial	1
13	133193	Shutter Dial Holder	1
14	170004	Finder Cover S.S.	1
15	61902022	Setting Screw	1
16	★	Finder Cover Sub Ass'y	1.
17	128853	Counter Window	1
18	104222	Release Button Guide	1
19	104207	Release Button	1
20	133194	Shutter Dial Holder Setting Shaft	1
21	128115	Back Light-proof Plate	1
22	128110	Shoe Dress Plate	1
23	61823022	Setting Screw	3
24	128109	Accessory Shoe	1
25	128113	Contact Ass'y	1
26	128127	Front Plate S.S.	1
27	133493	Switch Lever Ring Stopper	1
28	★	Switch Lever	1
29	★	Switch Lever Ring	1
30	★	Switch Click Pin	1
31	133494	Switch Lever Washer	1
32	121686	Rewind Shaft Plate SP S.S.	1
33	170705	Rewind Shaft Plate Spring	1
34	60113110	Adjusting Washer	
	60123110	Adjusting Washer	
35	★	Rewind Crank Arm Ass'y	1
36	170710	Rewind Crank Arm Shaft	1
37	170701	Rewind Knob	1
38	128806	Aperture Scale Plate Fixer	
39	128156	Front Name Plate	1
40	63713521	Setting Screw	1

101405
101407

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION
Finder Cover Ass'y	133075	13~25.
Rewind Hnob Ass'y	101060	32~37.
Switch Lever Ass'y	133080	28~30

NOTE: (Parts with marked "★" are not available.)

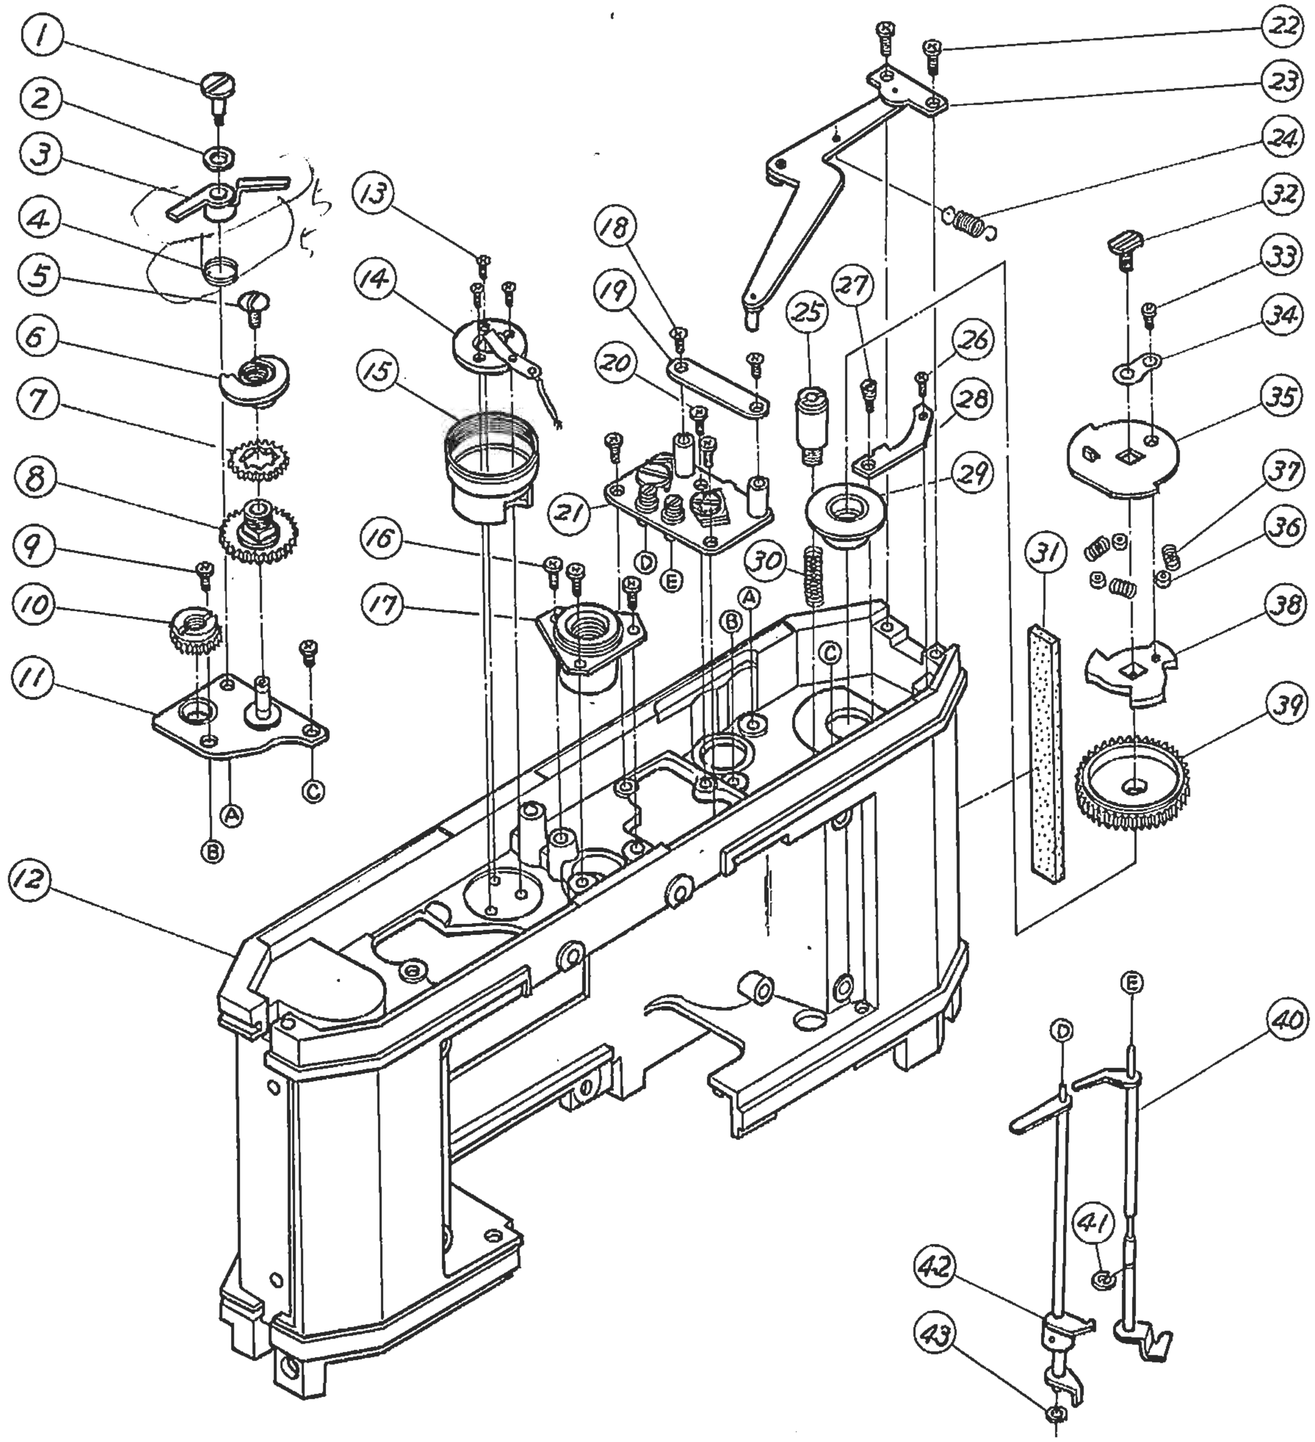

	PARTS NO	DESCRIPTION	QTY
1	121629	Rewind Release Lever Shaft	1
2	60653110	Adjusting Washer	1
	60113110	Adjusting Washer	
3	121004	Rewind Release Lever Ass'y	1
4	121628	Rewind Release Lever Spring	1
5	121663	Intermediate Gear S.S.	1
6	128679	Mirror Cocking Cam	1
7	170220	Intermediate Gear (Upper)	1
8	170221	Intermediate Gear (Lower)	1
9	63922824	Setting Screw	2
10	170247	Sprocket Gear (Lower)	1
11	121003	Winding Base Plate Ass'y	1
12	★	Body	1
13	61813028	Setting Screw	3
14	126073	Battery Box Contact Ass'y	1
15	170081	Battery Box	1
16	61924024	Setting Screw	3
17	170006	Tripod Socket	1
18	61813024	Setting Screw	2
19	128672	Mirror Set Slide Plate (B)	1
20	63913024	Setting Screw	3
21	133033	Switch Shaft Holder Base Ass'y	1
22	61813024	Setting Screw	2
23	133034	Mirror Winding Lever Ass'y	1
24	133676	Mirror Winding Lever Spring	1
25	128210	Shift Shaft Metal	1
26	61813524	Setting Screw	1
27	133616	Winding Control Plate S.S.	1
28	104607	Winding Limit Plate	1
29	121187	Spool Lower Bearing	1
30	121438	Shift Shaft Spring	1
31	121146	Body Light-proof Moltopren (B)	1
32	121633	Winding Shaft Set S.S.	1
33	61912024	Setting Screw	1
34	170232	Winding Shaft S.S. Washer	1
35	128629	Winding Cam Plate	1
36	170214	Winding Roller	3
37	121618	Roller Holding Spring	3
38	170213	Winding Clutch Plate	1
39	170212	Winding Gear	1
40	121039	Governor Change Shaft Ass'y	1
41	121336	Snap Ring	1
42	121040	Connecting Rod Ass'y	1
43	60111510	Adjusting Washer	(1)
	60121510	Adjusting Washer	(1)

NOTE: (Parts with marked "★" are not available.)

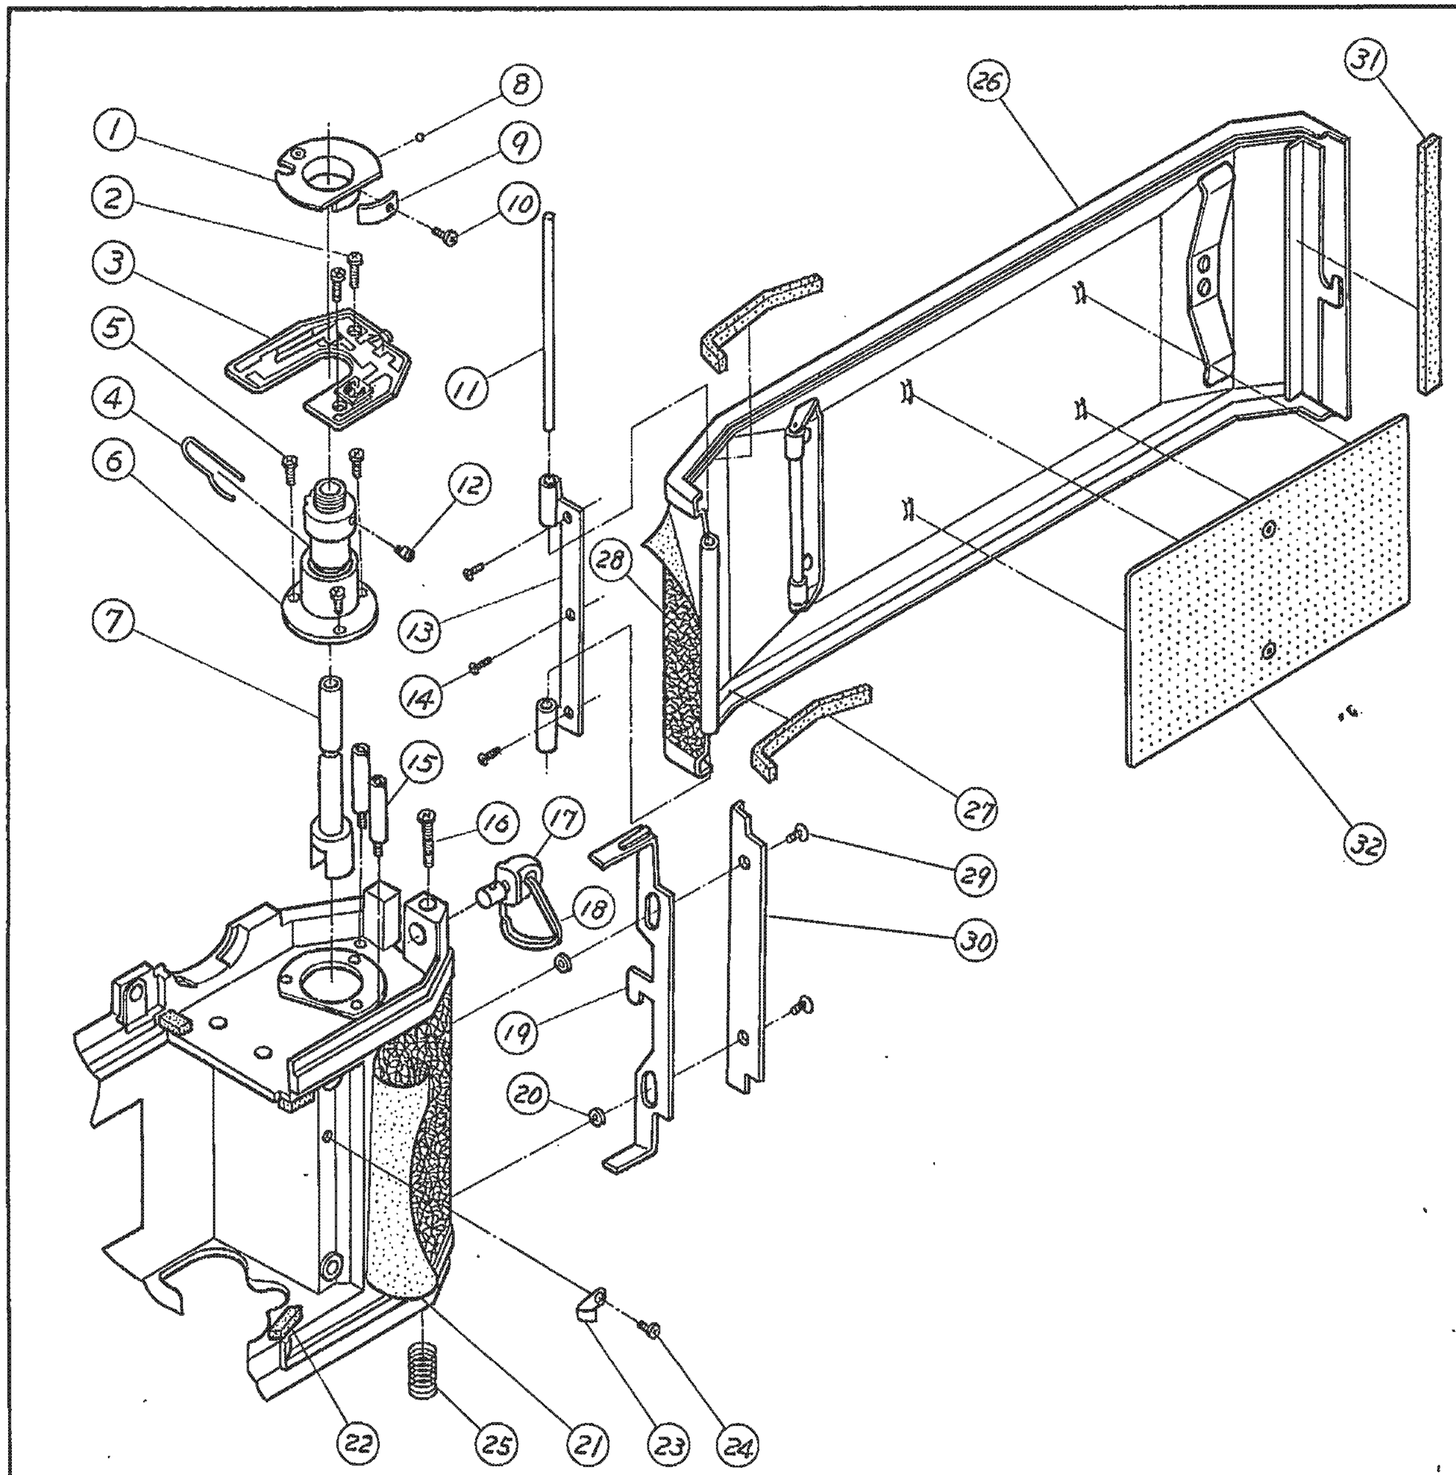

#3 13308310 New Type

	PARTS NO	DESCRIPTION	QTY
1	133072	Switch Click Plate Ass'y	1
2	61913024	Setting Screw	2
3	133083	Print Circuit Ass'y	1
4	121683	Rewind Shaft Spring	1
5	63912224	Setting Screw	3
6	★	Rewind Shaft Holder	1
7	★	Rewind Shaft	1
8	66701520	Steel Ball	1
9	133496	Switch Click Spring	1
10	61901424	Setting Screw	1
11	★	Back Cover Hinge Shaft	1
12	121431	Winding Stud	1
13	★	Back Cover Hinge	1
14	61813024	Setting Screw	3
15	133529	Print Circuit Setting Pole	2
16	63928024	Setting Screw	2
17	650051	Strap Holder	2
18	65006100	Strap Holder Ring	2
19	104605	Lock Plate	1
20	170010	Lock Plate Collar	2
21	133190	Front Leather (A)	1
22	110039	Body Front Light-proof Moltopren	6
23	110928	Cord Holder	1
24	61911524	Setting Screw	1
25	121122	Lock Plate Spring	1
26	★	Back Cover Ass'y	1
27	101184	Back Cover Light-proof Stuff (II)	2
28	128142	Back Cover Leather	1
29	61813524	Setting Screw	2
30	104606	Lock Plate Cover	1
31	170032	Back Cover Light-proof Stuff	1
32	101013	Film Pressure Plate Ass'y	1
	13308310	Print Circuit Ass'y (New)	

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Back Cover Ass'y	133069	11.13~14.26~28.31.
Rewind Shaft Ass'y	133036	4.6~7.

NOTE: (Parts with marked "★" are not available.)

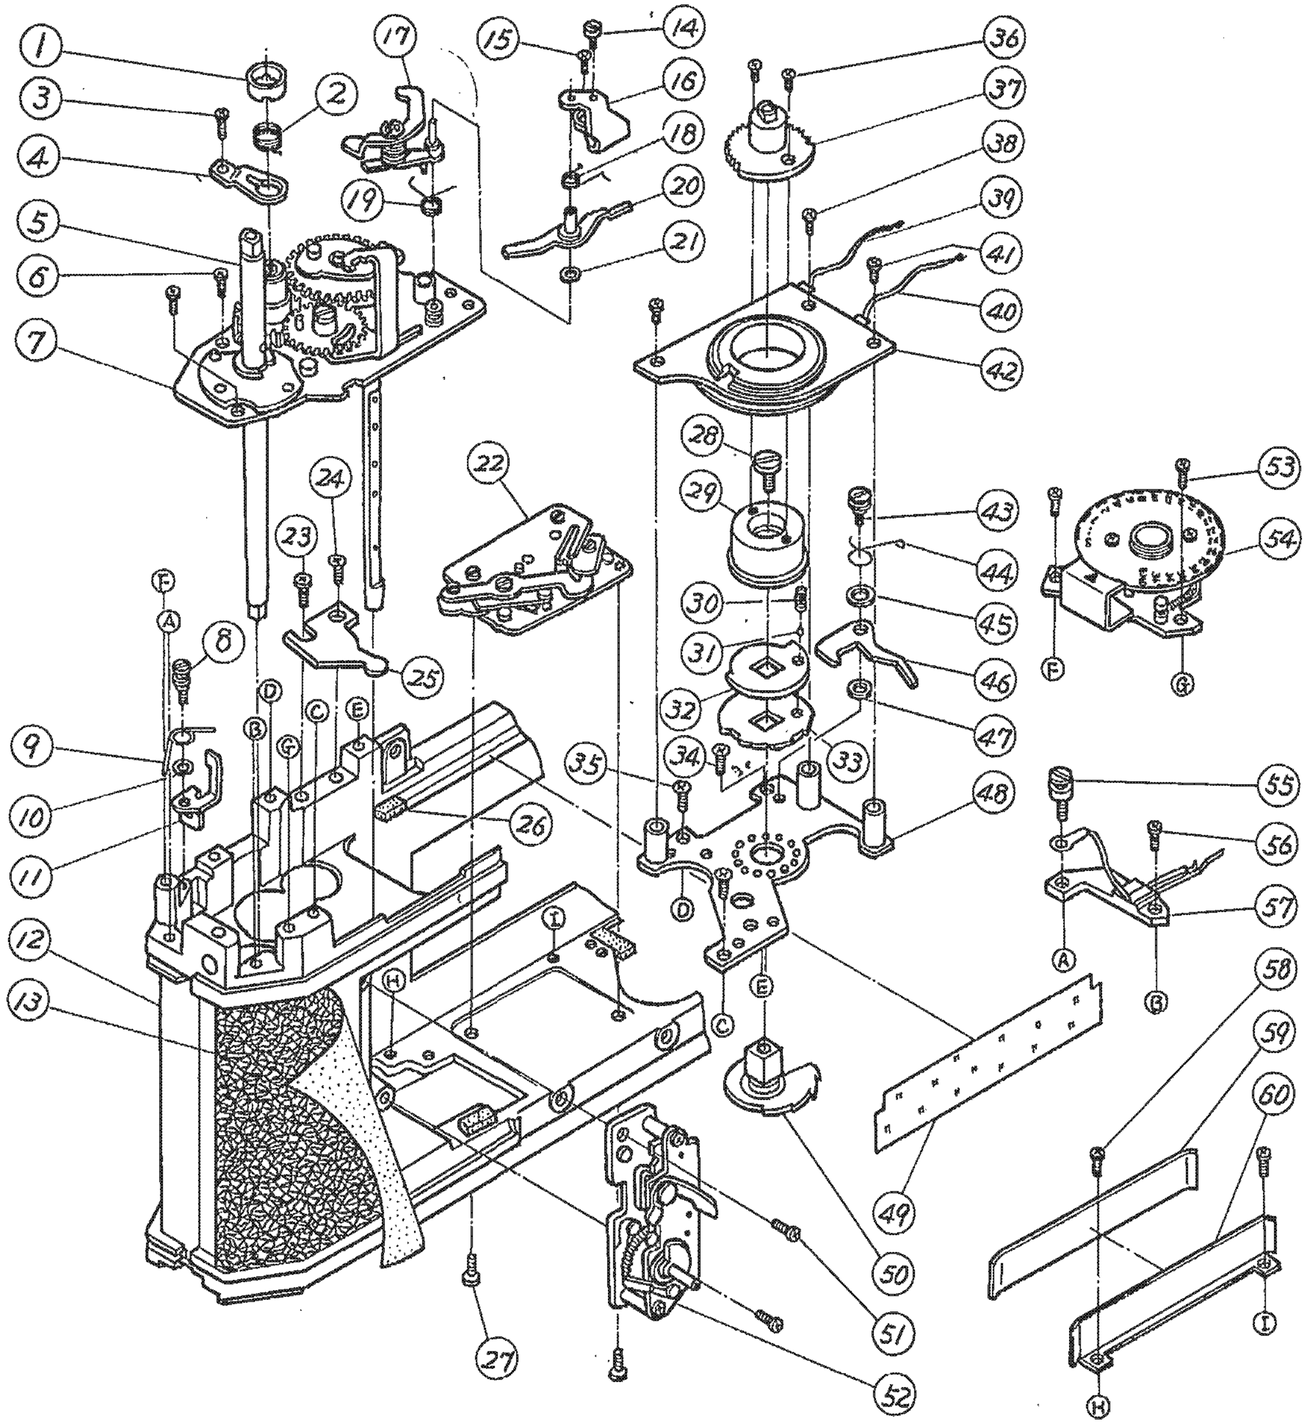
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
A
B
C
D
E
F
G
H
I

	PARTS NO	DESCRIPTION	QTY
41	61912524	Setting Screw	2
42	133502	Shutter Connecting Resistor	1
43	121326	Connecting Rod Setting Lever S.S.	1
44	121333	Setting Lever Pressure Spring	1
45	60722610	Adjusting Washer	1
	60752610	Adjusting Washer	1
46	104202	Connecting Rod Setting Lever	1
47	60321810	Adjusting Washer	1
48	★	Shutter Cam Base Sub Ass'y	1
49	128387	Shutter Light-proof Curtain	1
50	★	High-speed Set Cam	1
51	63914024	Setting Screw	2
52	121038	Self-timer	1
53	★	Counter Base Ass'y	1
54	63913024	Setting Screw	2
55	121433	Synchro Base Plate S.S.	1
56	63914024	Setting Screw	1
57	133022	Synchro Contact Base Ass'y	1
58	61912024	Setting Screw	2
59	★	Light-proof Paper	1
60	★	Light-proof Plate	1

	PARTS NO	DESCRIPTION	QTY
1	170252	Anti-rewind Collar	1
2	128653	Winding Kick Spring A	1
3	63913024	Setting Screw	1
4	128652	Anti-rewind Base Plate	1
5	121017	Winding Shaft Ass'y	1
6	63924024	Setting Screw	2
7	★	SW Base Plate Ass'y	1
8	121865	Returning Lever Shaft	1
9	121877	Returning Lever Spring	1
10	128666	Regulating Lever Washer (1)	調
	128667	Regulating Lever Washer (2)	調
11	104803	Returning Lever	1
12	★	Body	1
13	133191	Front Leather (B)	1
14	121434	Winding Stud	1
15	61812524	Setting Screw	1
16	★	Fixing Shaft Supporter	1
17	133042	Lower Gear Fixing Hook Ass'y	1
18	121331	Upper Gear Fixing Spring	1
19	121330	Fixing Hook Spring	1
20	133010	Upper Gear Fixing Hook Ass'y	1
21	60111310	Adjusting Washer	1
22	133047	Governor Ass'y	1
23	63924024	Setting Screw	1
24	61824024	Setting Screw	1
25	133216	Rotary Control Disc (B)	選
	133211	Rotary Control Disc (B)	選
26	170270	SW Base Plate Light-proof Moltopren	1
27	61912524	Setting Screw	2
28	★	Shutter Dial S.S.	1
29	★	Shutter Connecting Base	1
30	121334	Ball Setting Spring	1
31	66702020	Steel Ball	1
32	★	Slow Speed Change Cam	1
33	★	Slow Speed Set Cam	1
34	63813522	Setting Screw	2
35	61913024	Setting Screw	1
36	61813024	Setting Screw	2
37	★	ASA Change Gear	1
38	63903024	Setting Screw	1
39	★	Lead Wire A	1
40	★	Lead Wire C	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
SW Base Plate Ass'y	133015	1 7.14 21.
Shutter Cam Base(A)	133045	28 48.50.
Light-proof Plate(A)	121035	59. 60.

NOTE: (Parts with marked "★" are not available.)

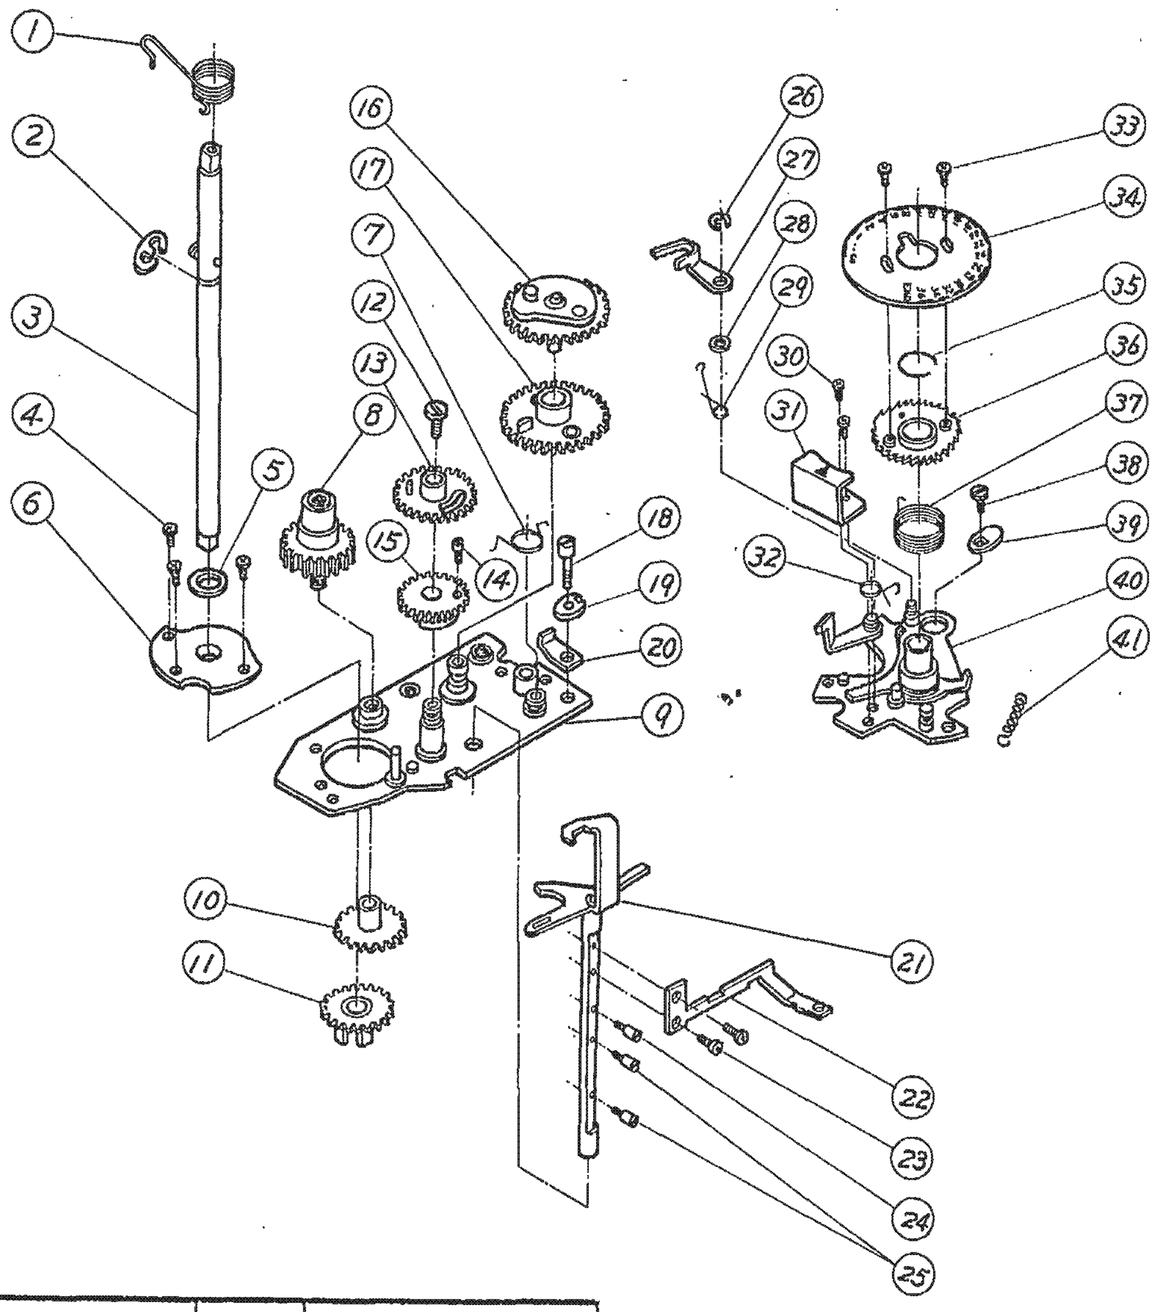

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
SW Base Plate Ass'y	133015	6.8~10. 13~15.21.
F Counter Base Plate SAss'y	133025	26~32.35~41.

	PARTS NO	DESCRIPTION	QTY
41	121876	F Counter Lever Spring	1

	PARTS NO	DESCRIPTION	QTY
1	121605	Winding Spring	1
2	121658	Winding Shaft Washer	1
3	121017	Winding Shaft Ass'y	1
4	61912224	Setting Screw	3
5	60254110	Adjusting Washer	1
	60214110	Adjusting Washer	
	60224110	Adjusting Washer	
6	128602	Winding Shaft Metal	1
7	121316	Governor Change Shaft Holder Spring	1
8	170251	Idle Gear (Upper)	1
9	133014	Switch Base Plate Sub Ass'y	1
10	170250	~~Idle Gear (Lower)~~	1
11	121188	Spool Gear	1
12	121429	Clutch Shaft S.S.	1
13	128009	Clutch Upper Gear Ass'y	1
14	121434	Winding Stud	1
	121435	Winding Stud	
	121436	Winding Stud	
15	170402	Clutch Lower Gear	1
16	133013	Upper Gear Ass'y	1
17	133012	Lower Gear Ass'y	1
18	133238	Fixing Hook Stopper	1
19	133239	Sickle Shaped Base Adjusting Collar	1
20	170130	Upper Gear Fixing Hook Regulating Plate	1
21	133091	Shifter Shaft	1
22	133414	Shifter Lever	1
23	63903024	Setting Screw	2
24	121432	Shift Shaft Pin	1
25	121431	Shift Shaft Pin	2
26	121869	Shift Shaft Snap Ring	1
27	170501	Transport Claw	1
28	60112110	Adjusting Washer	1
	60122110	Adjusting Washer	
29	121874	Transport Claw Spring	1
30	61901424	Setting Screw	2
31	104802	F Counter Indicator	1
32	121875	Stopper Claw Spring	1
33	63901824	Setting Screw	2
34	104801	F Counter Dial	1
35	121878	Counter Stopper Ring	1
36	★	F Counter Gear	1
37	121873	F Counter Returning Spring	1
38	121866	F Counter Cam S.S.	1
39	170510	F Counter Cam	1
40	★	F Counter Base Plate Sub Ass'y	1

NOTE: (Parts with marked "★" are not available.)

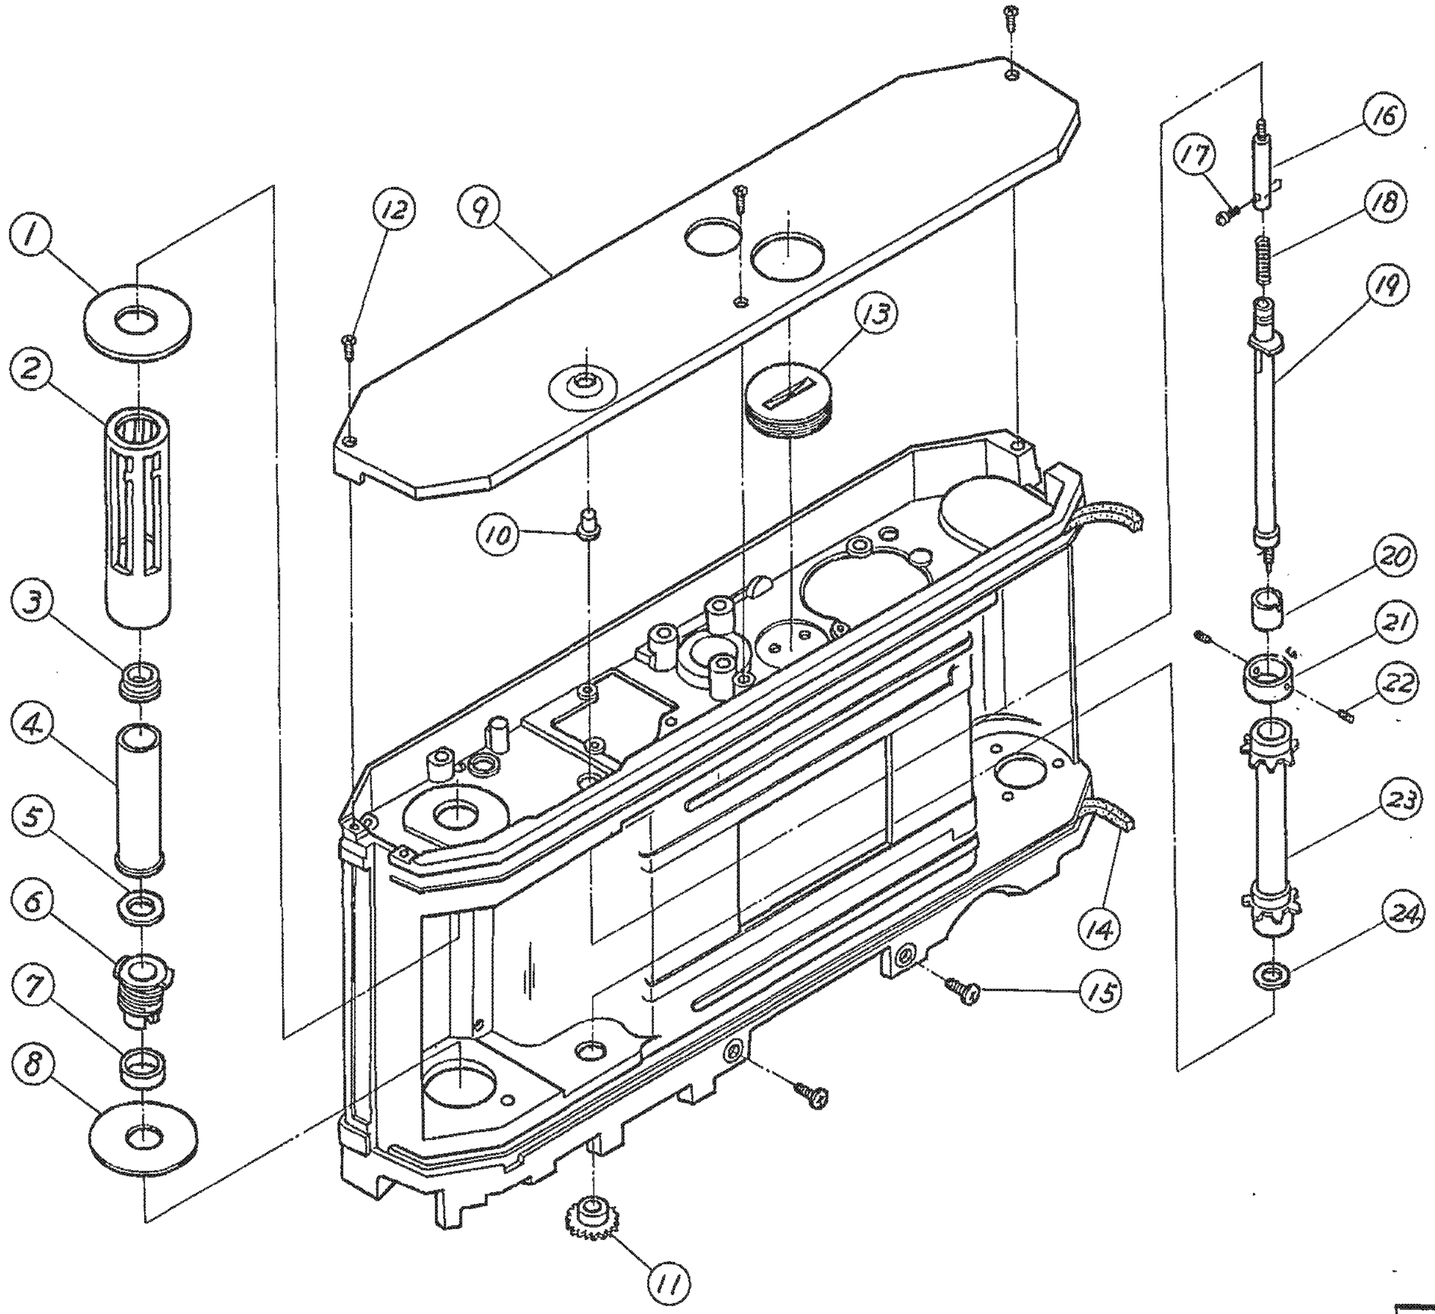

	PARTS NO	DESCRIPTION	QTY
1	121186	Spool Collar	1
2	316668	Outside Spool	1
3	121185	Spool Holder	1
4	305658	Inside Spool	1
5	121189	Inside Spool Bushing	1
6	029601	Friction Shaft Ass'y	1
7	305664	"F" Gear Collar	1
8	170216	Spool Washer	1
9	133120	Bottom Cover	1
10	170248	Rewind Button	1
11	128645	Sprocket Gear (Upper)	1
12	61813028	Setting Screw	3
13	170080	Battery Cap	1
14	132139	Body Moquette	2
15	61925024	Setting Screw	2
16	170240	Rewind Button Shaft	1
17	121656	Rewind Button S.S.	1
18	121657	Rewind Button Spring	1
19	170241	Sprocket Shaft	1
20	170244	Clutch	1
21	170271	Sprocket Collar	1
22	121655	Clutch S.S.	2
23	170243	Sprocket	1
24	170242	Sprocket Adjusting Washer	1
	128630	Sprocket Adjusting Washer	3

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Sprocket Ass'y.	121002	16～23.

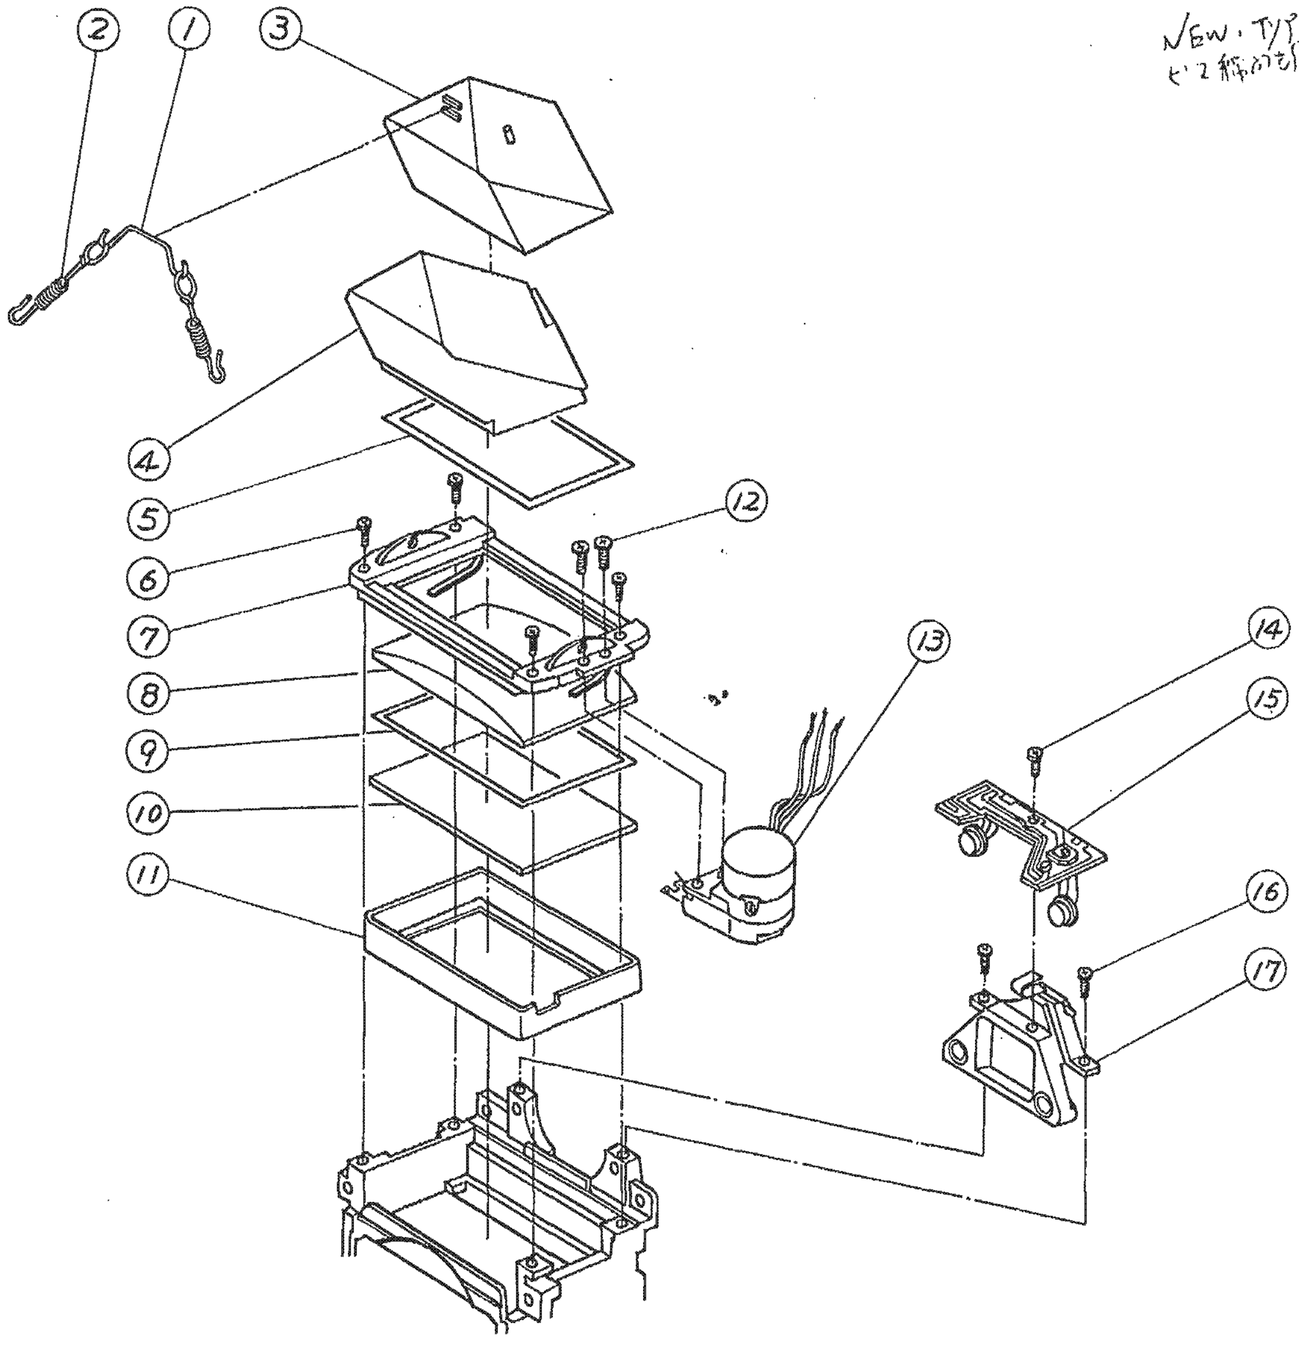

NEW. TYPE
ﾋﾞﾌｫｰﾏｯﾄﾌﾟﾘｽﾞﾑ No

	PARTS NO	DESCRIPTION	QTY
1	121791	Penta Pressure Spring Post	1
2	104758	Penta Pressure Spring	2
3	170863	Penta Prism Roof Cap	1
4	121811	Penta Prism	1
5	133806	Penta Prism Supporter	1
6	61914024	Setting Screw	4
7	133801	Penta Prism Holder	1
8	121812	Condenser Lens	1
9	121855	Condenser Washer	1
10	121813	Fresnel Lens	1
11	128802	Condenser Lens Holder	1
12	63913024	Setting Screw	2
13	133501	Indicating Meter	1
14	61912224	Setting Screw	1
15	133081	CDS Ass'y	1
16	61914024	Setting Screw	2
17	128840	CDS Holder	1
	133801/6	Penta Prism Holder (NEW)	

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Penta Prism Holder Ass'y	133071	2.5.7.
CDS Holder Ass'y	133082	14~17.

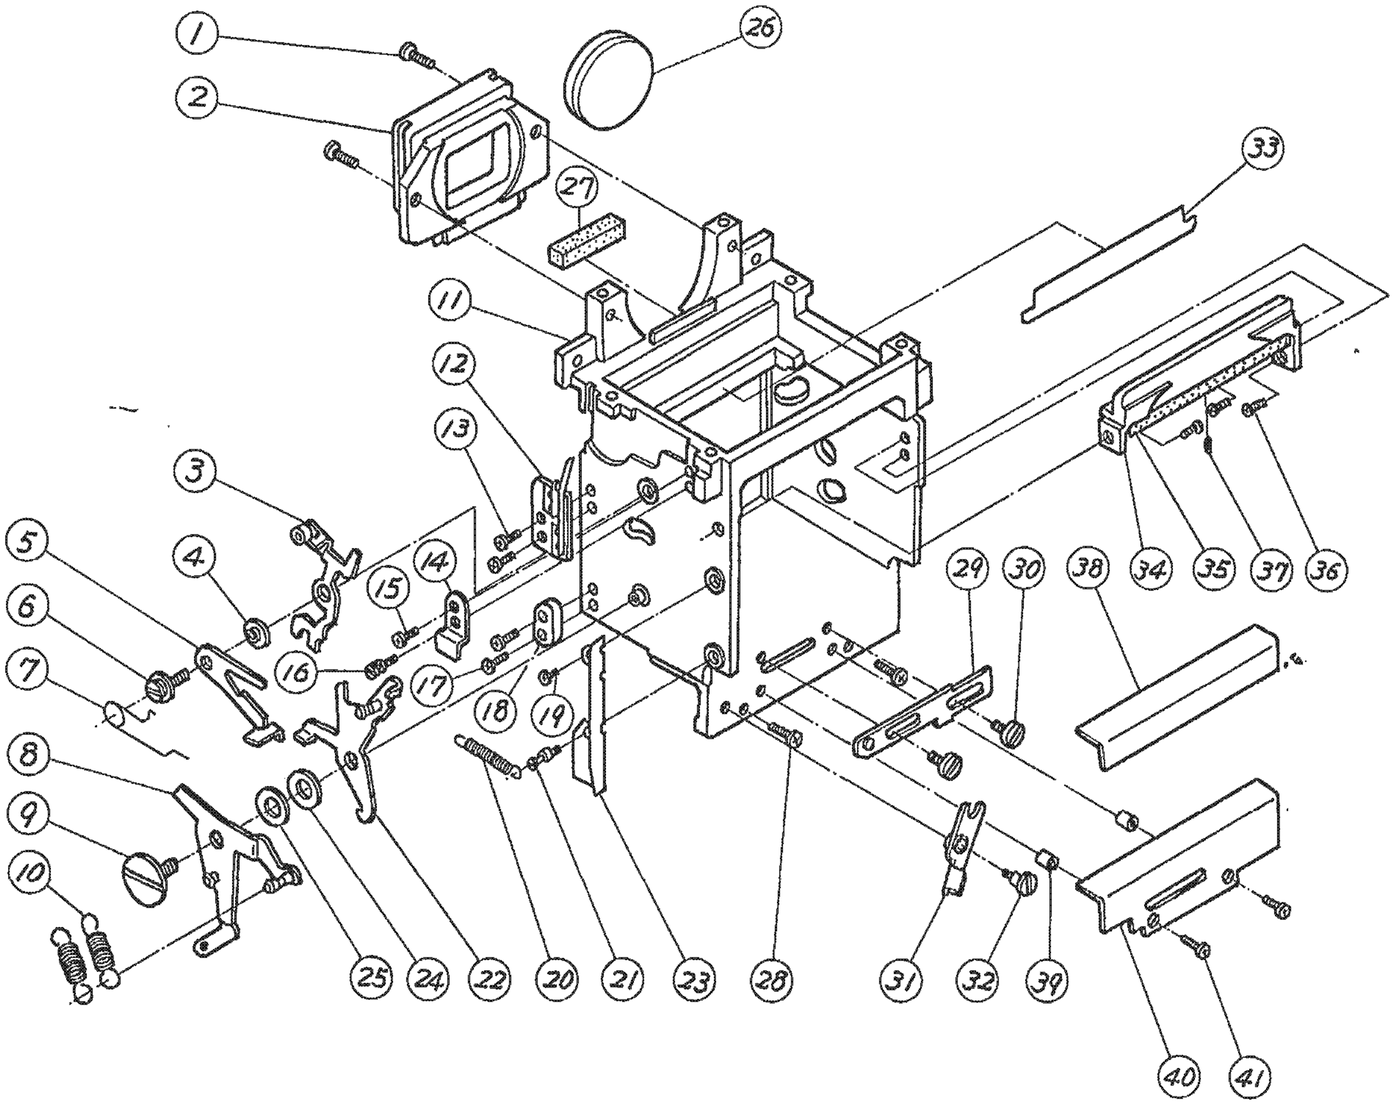

	PARTS NO	DESCRIPTION	QTY
1	61813524	Setting Screw	2
2	104765	Eye-piece Frame	1
3	133054	Returning Second Lever Ass'y	1
4	133715	Start Lever Shaft	1
5	133714	Start Lever	1
6	133719	Start Lever S.S.	1
7	133720	Start Lever Spring	1
8	133056	Mirror Set Lever Ass'y	1
9	104705	Mirror Setting Lever Shaft	1
10	133710	Mirror Operating Spring	2
11	★	Mirror Box Sub Ass'y	1
12	133057	Synchro Switch Ass'y	1
13	61912524	Setting Screw	2
14	133721	Start Lever Fixing Plate	1
15	61912524	Setting Screw	1
16	133722	Start Lever Spring Post	1
17	61913524	Setting Screw	2
18	128711	Set Lever Stopper	1
19	61911824	Setting Screw	1
20	133712	Set Lever Restore Spring	1
21	121825	Mirror Regulating Lever Shaft Holder	1
22	133055	Mirror Operating Lever Ass'y	1
23	133723	Mirror Box Side Cover (B)	1
24	60223310	Adjusting Washer	1
25	60213310	Adjusting Washer	3
	60723310	Adjusting Washer	3
	60753310	Adjusting Washer	3
26	12181493	Eye-piece Lens Ass'y	1
27	170894	Eye-piece Lens Light-Proof Moquette	1
28	61923024	Setting Screw	2
29	128059	Diaphragm Lever Ass'y	1
30	128766	Diaphragm Lever Shaft	2
31	128060	Diaphragm Connecting Lever Ass'y	1
32	128770	Diaphragm Connecting Lever Shaft	1
33	128760	Mirror Plate Light-proof Curtain	1
34	128049	Condenser Frame Fixing Ass'y	1
35	128777	Mirror Cushion	1
36	61912524	Setting Screw	3
37	121821	Focus Adjusting S.S. (A)	1
38	128776	Inside Light-proof Paper (D)	1
39	128772	Mirror Box Front Cover Collar	2
40	128771	Mirror Box Front Cover	1
41	61914024	M Box Front Cover Screw	2

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Mirror Box Ass'y	133065	1～41.

NOTE: (Parts with marked "★" are not available.)

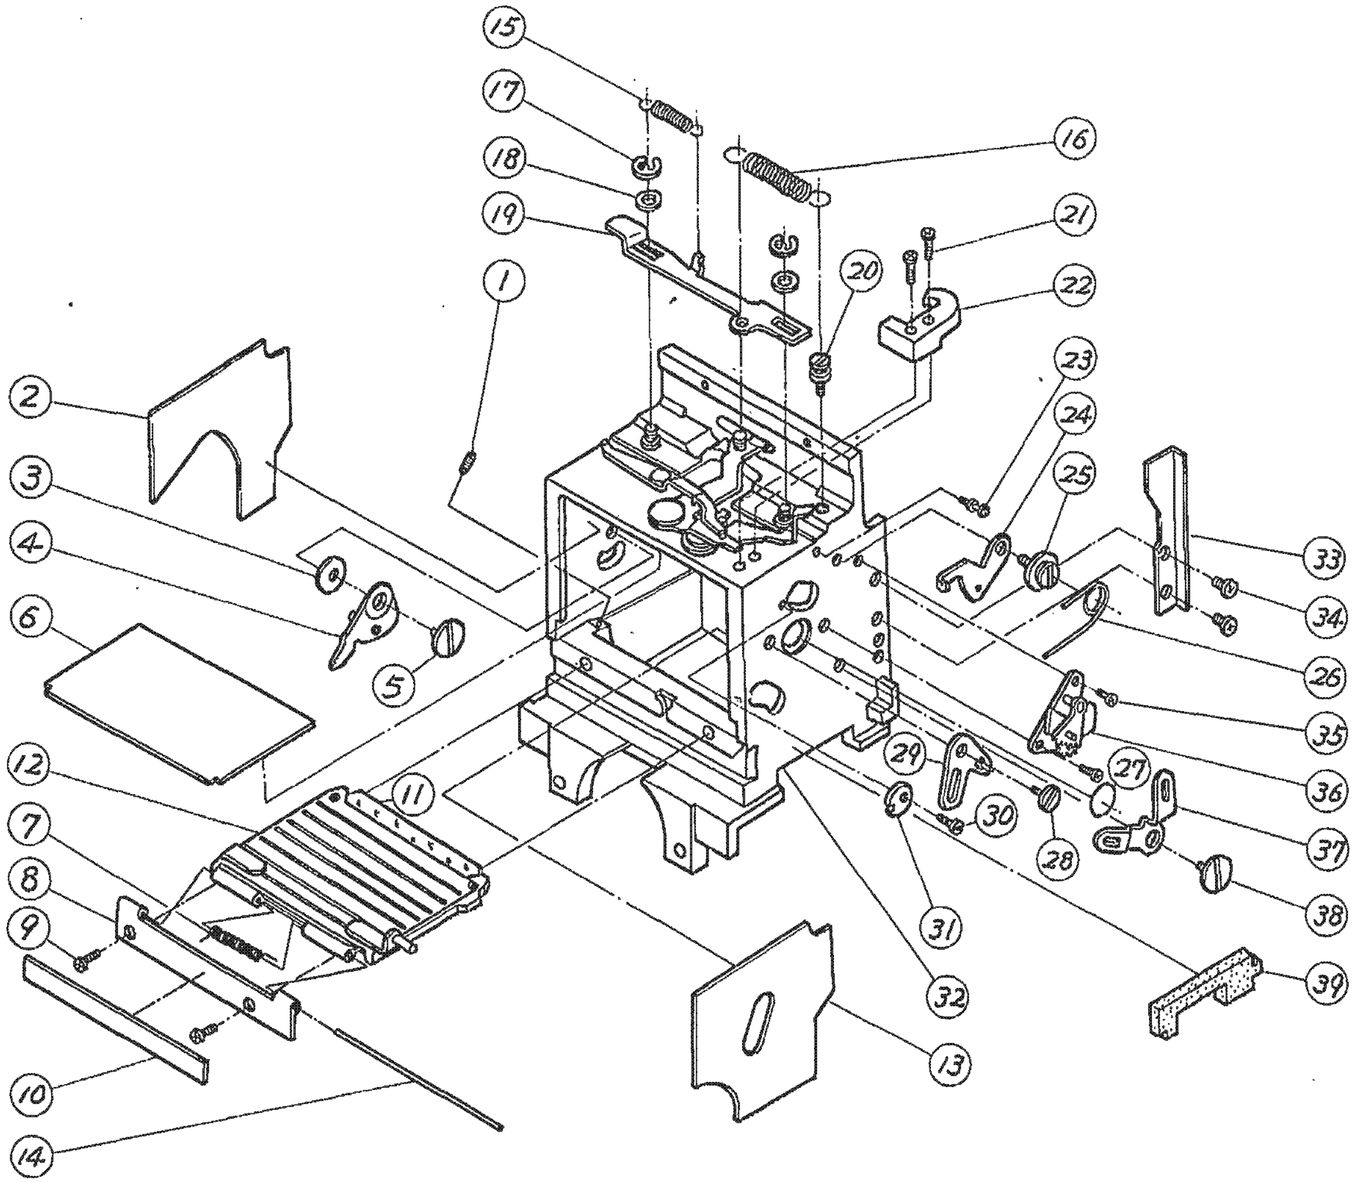

	PARTS NO	DESCRIPTION	QTY
1	121822	Focus Adjusting S.S. (B)	2
2	128775	Inside Light-proof Paper (C)	1
3	121753	Winding Lever Adjusting Washer	1
4	104029	Mirror Activating NO.1 Lever Ass'y	1
5	121820	Mirror Activating NO.1 Lever Shaft	1
6	128773	Inside Light-proof Paper (A)	1
7	★	Mirror Restore Spring	1
8	★	Mirror Plate Hinge	1
9	61914024	Setting Screw	2
10	170867	Mirror Box Light-proof Paper	1
11	★	~~R.F. Mirror~~ T.E.I.C. Order	1
12	★	Mirror Plate Sub Ass'y	1
13	128774	Inside Light-proof Paper (B)	1
14	★	Mirror Plate Hinge Shaft	1
15	128754	Restore Lever Returing Spring	1
16	133733	Aperture Lever Spring	1
17	66101525	Snap Ring (E-15)	2
18	60112110	Adjusting Washer	
19	133051	Restore Lever Ass'y	1
20	133736	Aperture Lever Spring Post (B)	1
21	61915024	Setting Screw	2
22	133737	Aperture Lever Stopper	1
23	121825	Mirror Regulating Lever Spring Holder	1
24	128096	Mirror Regulating Lever Ass'y	1
25	121824	Mirror Regulating Lever Shaft	1
26	121831	Mirror Regulating Lever Spring	1
27	121808	Tripod Socket Washer	1
28	128884	Governor Driving Lever Shaft	1
29	128023	Governor Driving Lever A Ass'y	1
30	61112510	Setting Screw	1
31	170841	Mirror Regulating Lever Stopper	1
32	★	Mirror Box Sub Ass'y	1
33	128815	Mirror Box Side Plate	1
34	61911524	Setting Screw	2
35	61902224	Setting Screw	2
36	131299	Lug Governor	1
37	128883	Governor Driving Lever (B)	1
38	128884	Governor Driving Lever Shaft	1
39	133810	M.B. Dust-proof Moltopren	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Mirror Box Ass'y	133065	1~39.
Mirror Box Plate(A)	128053	7~8. 11~12.14.

NOTE: (Parts with marked "★" are not available.)

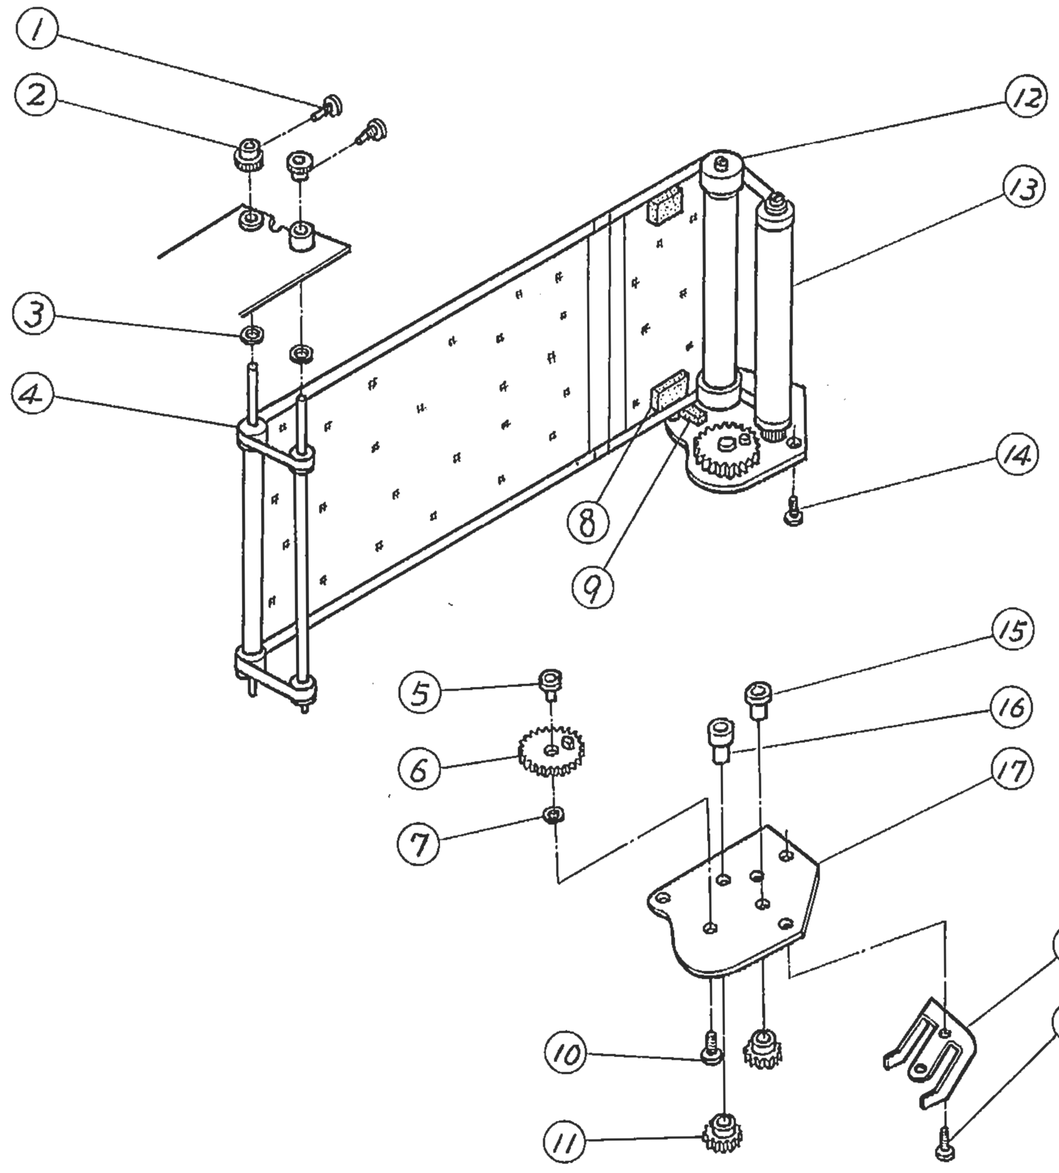

	PARTS NO	DESCRIPTION	QTY
1	121233	Curtain Shaft Gear S.S.	2
2	107156	Curtain Shaft Gear A	
	107166	Curtain Shaft Gear B	
3	60122110	Adjusting Washer	2
4	170156	Second Curtain Shaft Roller	2
5	107186	Restore Gear Shaft	1
6	121184	Mirror Restore Gear	1
7	60252610	Adjusting Washer	1
8	107873	Light-proof Moquette	2
9	110031	Light-proof Moquette	1
10	121323	Gear Shaft S.S.	1
11	170181	Ratchet Wheel	2
12	★	Upper Roller	1
13	★	Shutter Curtain Ass'y	1
14	63913024	Setting Screw	3
15	107179	Spring Shaft Holder	1
16	170179	First Curtain SP Shaft Holder	1
17	★	Ratchet Wheel Base Plate	1
18	170182	Pawl Spring	1
19	61911524	Setting Screw	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION(FIG.NO.)
Shutter Curtain(A)	133031	4,8~19.

NOTE: (Parts with marked "★" are not available.)